

GARMIN®

VHF 315 SERIES

Owner's Manual

© 2018 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

Garmin® and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. GHS™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

NMEA® and NMEA 2000® are registered trademarks of the National Marine Electronics Association. NOAA® is a registered service mark of the National Oceanic and Atmospheric Administration. BoatU.S.® is a registered trademark of the Boat Owners Association of the United States. Sea Tow® is a registered trademark of Sea Tow Services International, Inc. United States Power Squadrons® is a registered trademark of the United States Power Squadrons. Other trademarks and trade names are those of their respective owners.

Table of Contents

| | | | |
|--|-----------|--|----|
| Introduction..... | 1 | Viewing Your MMSI Number..... | 11 |
| Handset Overview..... | 2 | Distress Calls..... | 11 |
| Home Screen..... | 3 | Sending an Undesignated Distress | |
| System Status Icons..... | 4 | Call..... | 11 |
| Basic Operation..... | 4 | Sending a Designated Distress | |
| Turning On and Off the Device..... | 4 | Call..... | 12 |
| Adjusting the Volume..... | 4 | Waiting For and Receiving and | |
| Adjusting the Squelch Level..... | 5 | Acknowledgment for a Distress | |
| Selecting the Frequency Band..... | 5 | Call..... | 12 |
| Selecting a Channel..... | 5 | Stopping Automatic Retransmission | |
| Transmitting with the Radio..... | 5 | of Distress Calls..... | 12 |
| Calling Another GHS™ 11 Handset..... | 5 | Revoking a Distress Call..... | 13 |
| Scanning and Saving Channels..... | 6 | Placing Calls..... | 13 |
| Scanning All Channels..... | 6 | Placing Individual Calls..... | 13 |
| Saving a Channel..... | 6 | Placing Group Calls..... | 13 |
| Removing a Saved Channel..... | 6 | Placing All-Ships Calls..... | 14 |
| Scanning Saved Channels..... | 6 | Individual Call or Group Call | |
| Monitoring Multiple Channels..... | 7 | Channels..... | 14 |
| Selecting a Different Second-Priority | | Requesting a Vessel's Position..... | 14 |
| Channel..... | 7 | Receiving Calls..... | 14 |
| Switching to Priority Channels..... | 7 | Receiving Distress Calls and Distress | |
| Setting the Receiving Sensitivity..... | 7 | Relay Calls..... | 14 |
| Switching Between 1 W and 25 W | | Receiving All-Ships Urgency and | |
| Transmitting Modes..... | 8 | Safety Calls..... | 15 |
| Bypassing the Low Transmission | | Receiving Individual Routine Calls... | 15 |
| Power Setting..... | 8 | Receiving Position Requests..... | 15 |
| Using the Hailer Function..... | 8 | Receiving Position Calls..... | 15 |
| Foghorn..... | 9 | Receiving Group Calls..... | 15 |
| Sounding the Foghorn | | Position Tracking..... | 16 |
| Automatically..... | 9 | Selecting Vessels and Activating | |
| Sounding the Foghorn Manually..... | 9 | Position Tracking..... | 16 |
| Adjusting the Sound Frequency of the | | Viewing and Deactivating Vessels on | |
| Foghorn..... | 9 | the Position Tracking List..... | 16 |
| Entering Text..... | 9 | Deleting a Vessel From the Position | |
| NOAA® Weather Broadcasts and | | Tracking List..... | 16 |
| Alerts..... | 9 | Call Log..... | 17 |
| Tuning Weather Broadcasts..... | 10 | Viewing the Calls in the Call Log..... | 17 |
| Enabling and Disabling Weather | | Placing a Call from a Call Log..... | 17 |
| Alerts..... | 10 | Saving a Vessel or Station to the | |
| Digital Selective Calling..... | 10 | Directory from the Call Log..... | 18 |
| Digital Selective Calling..... | 10 | Deleting a Call Log Entry..... | 18 |
| Entering Your MMSI Number..... | 11 | Directory..... | 18 |
| | | Viewing Saved Vessels and Stations in | |
| | | the Directory..... | 18 |
| | | Adding an Entry to the Directory..... | 18 |
| | | Editing an Entry in the Directory..... | 18 |
| | | Deleting an Entry from the | |
| | | Directory..... | 18 |

| | |
|--|----|
| Adding a Group..... | 18 |
| Editing a Group..... | 19 |
| Deleting a Group..... | 19 |
| DSC Settings..... | 19 |
| Manual Position Information..... | 19 |
| Changing the Channel to 16 Automatically..... | 19 |
| Sending Automatic Replies..... | 19 |

Automatic Transmitter Identification System..... 20

| | |
|--|----|
| Entering Your ATIS Identification Number..... | 20 |
| Turning On and Off ATIS..... | 20 |
| Viewing Your ATIS Identification Number..... | 20 |

NMEA 0183 and NMEA 2000®.....21

| | |
|--|----|
| Additional Functionality with Other Garmin Devices..... | 21 |
| Communicating Over NMEA 0183 or NMEA 2000..... | 21 |
| Configuring DSC NMEA Transmissions..... | 21 |

System Settings..... 22

| | |
|-----------------------------------|----|
| Number Settings..... | 22 |
| Units Settings..... | 22 |
| Configuring the Time Offset..... | 22 |
| Selecting the Frequency Band..... | 22 |
| Changing a Channel Name..... | 23 |
| Restoring Factory Settings..... | 23 |

Appendix..... 23

| | |
|------------------------------------|----|
| Alarms and Messages..... | 23 |
| Channel Lists..... | 23 |
| Channel Prefixes..... | 23 |
| VHF 315 Series Specifications..... | 24 |
| NMEA..... | 24 |
| NMEA 0183 Information..... | 24 |
| NMEA 2000 PGN Information..... | 25 |
| Cleaning the Outer Casing..... | 25 |

 
Introduction

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.


Handset Overview



| Item | Key | Description |
|------|---|---|
| ① | PTT | Hold to broadcast. |
| ② | DISTRESS | Lift the door and press to send a DSC distress call with a programmed MMSI number (Entering Your MMSI Number, page 11). |
| ③ |  | Press the key that corresponds to the on-screen item to select the item. |
| ④ | ENTER | On the home screen, rotate to change the channel. On the home screen, press to toggle weather channels (NOAA® Weather Broadcasts and Alerts, page 9). Rotate to change the volume or squelch level after pressing the VOL/SQ key. Rotate to highlight an item in a list. Press to select an item. |
| | PWR North America: 16/9 International: 16+ | Hold to turn the radio on and off. Press to toggle between preset channels. |
| | HI/LO | Press to change the transmission mode and power settings. |
| | CLEAR | Press to return to the previous menu option. Press to cancel or mute an incoming DSC call. |
| | MENU | From the home screen, press to view configuration options. From a menu, press to return to the home screen. |

| Item | Key | Description |
|------|--------|--|
| | DSC | Press to view a menu of DSC options. |
| | VOL/SQ | Press to switch between volume or squelch. |

Home Screen

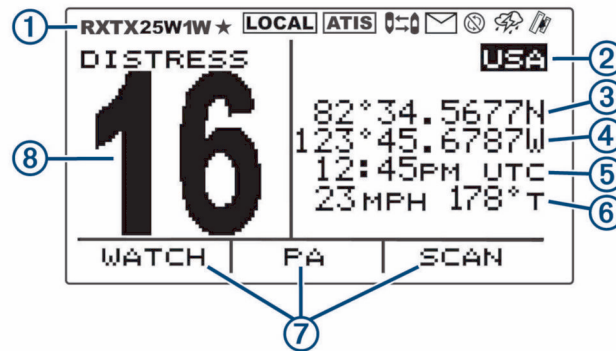






| | |
|---|--|
| ① | Radio system status, settings, and alerts |
| ② | International, Canadian, or USA frequency band |
| ③ | Latitude ¹ |
| ④ | Longitude ¹ |
| ⑤ | Time ¹ |
| ⑥ | Speed over ground (SOG) or course over ground (COG) ² |
| ⑦ | Soft-key functions change depending on your current activity |
| ⑧ | Working channel |

¹ The latitude, longitude, and time appear when the radio has a GPS signal acquired. You can enter data manually when the radio does not have a GPS signal.

² The SOG and COG appear when the radio has a GPS signal acquired, and the option is enabled in the menu ([Number Settings, page 22](#)).

System Status Icons

| Icon | Status |
|---|--|
| RX | Receiving an incoming signal |
| TX | Transmitting |
| 25W | Transmitting at 25 W |
| 1W | Transmitting at 1 W |
| ★ | Saved channel |
| LOCAL | Local receiver mode, often used in areas with radio frequency interference (harbors) |
| ATIS | ATIS enabled |
|  | Position tracking enabled |
|  | Auto channel changing disabled |
|  | Incoming or missed DSC call |
|  | Weather alerts enabled |
|  | GPS signal acquired |

Basic Operation

Turning On and Off the Device

Hold **PWR**.

TIP: You can set the device to turn on automatically ([System Settings, page 22](#)).

Adjusting the Volume

- 1 Set the squelch level to **MIN** before you adjust the volume (optional).
- 2 Select **VOL/SQ** twice.
VOLUME appears on the screen.
- 3 Turn the dial to increase or decrease the volume.

Adjusting the Squelch Level

You can adjust the sensitivity level of the squelch to filter out background noise. When you increase the squelch level, you hear fewer weak background signals when you are receiving.

- 1 Select **VOL/SQ**.
SQUELCH appears on the screen.
- 2 Turn the dial counter-clockwise until you hear audio.
- 3 Turn the dial clockwise until there is no background noise.

Selecting the Frequency Band

You can switch between the USA, International, or Canadian frequency bands ([Channel Lists, page 23](#)).

NOTE: Not all frequency bands are available on all device models.

- 1 Select **MENU > CHANNEL > FREQUENCY BAND**.
- 2 Select a frequency band.

Selecting a Channel

You can select an International, Canadian, or USA channel ([Selecting the Frequency Band, page 5](#)).

Turn the dial.

Transmitting with the Radio

- 1 Select an appropriate channel.
- 2 Verify that the channel is clear.
NOTE: You cannot obstruct the communications of other people due to Federal Communications Commission (FCC) and international guidelines.
- 3 Hold **PTT** on the handset.
TX appears at the top of the screen.
- 4 Speak into the handset.
NOTE: Five minutes is the maximum time allowed for transmission. After five minutes of transmitting, PTT is disabled until you release PTT.
- 5 Release **PTT**.

Calling Another GHS™ II Handset

After connecting at least two GHS 11 handsets to your radio, you can use the intercom feature to communicate between the handsets. For example, you can use a handset at the helm to communicate with a user of a handset in a below-deck engine room.

NOTE: The intercom feature is not available with VHF 110/115 models.

- 1 Select **PA > INTERCM**.
- 2 Rotate the dial on the handset to select an intercom station to call, and select **ENTER**.
- 3 At the receiving intercom station, hold **PTT** to respond.
Either user must hold PTT to talk.
- 4 Select **EXIT** to end the call.

Scanning and Saving Channels

Scanning All Channels

When you scan channels, the radio searches for channels that are broadcasting. When a channel is broadcasting, the radio pauses on that channel until the broadcast stops. After four seconds of inactivity on a channel, the radio resumes scanning.

NOTE: When you turn on ATIS (*Automatic Transmitter Identification System*, page 20), the radio does not scan or save channels.

- 1 Select **SCAN > ALL**.
- 2 Select an option:
 - To exclude the currently active channel from subsequent passes and resume scanning, select **SKIP**.
 - To scan channel 16 each time another channel is scanned, select **+CH16**.
For example, the radio scans channel 21, channel 16, channel 22, channel 16, and so on. **+CH16** appears on the device screen.
 - To scan channel 16 in its usual order, select **-CH16**.
For example, the radio scans channel 14, channel 15, channel 16, channel 17, and so on.
 - To end the scan, select **EXIT**.
The radio stops scanning and tunes to the last used, active channel.

Saving a Channel

You can save any channel except the weather (WX) channels. You can save an unlimited number of channels.

- 1 Select **SCAN**.
- 2 Turn the **ENTER** dial until you find a channel you want to save.
- 3 Select **SAV CH**.
★ appears above a saved channel.

Removing a Saved Channel

- 1 Select **SCAN**.
- 2 Turn the **ENTER** dial until you find a saved channel.
NOTE: A saved channel has ★ above it.
- 3 Select **SAV CH**.

Scanning Saved Channels

You can scan only the channels you have saved. When a saved channel is broadcasting, the radio pauses on that channel until the broadcast stops. After four seconds of inactivity on a channel, the radio resumes scanning.

NOTE: When you turn on ATIS (*Automatic Transmitter Identification System*, page 20), the radio does not scan or save channels.

- 1 Select **SCAN > SAVED**.
- 2 Select an option:
 - To exclude the currently active channel from subsequent passes and resume scanning, select **SKIP**.
 - To scan channel 16 each time another saved channel is scanned, select **+CH16**.
For example, the radio scans saved channel 21, channel 16, saved channel 25, channel 16, and so on. **+CH16** appears on the device screen.
 - To stop scanning channel 16, select **-CH16**.
For example, the radio scans saved channel 21, saved channel 25, and so on.
 - To end the scan, select **EXIT**.
The radio stops scanning and tunes to the last used active channel.

Monitoring Multiple Channels

Before you can monitor multiple channels, you must turn off ATIS (*Automatic Transmitter Identification System*, page 20).

You can monitor priority channels and the currently selected channel for broadcasting activity. Channel 16 is the first-priority channel on your radio. Channel 9 is the default second-priority channel. You can program a different channel as your second-priority channel (*Selecting a Different Second-Priority Channel*, page 7).

Select **WATCH**.

Monitoring Two Channels

You can monitor your current channel and channel 16 at the same time.

Select **WATCH > DUAL**.

DUAL WATCH and the channels you are monitoring appear on the screen. For example, DUAL WATCH CH; and 16 + 9.

Monitoring Three Channels

You can monitor your current channel, channel 16, and your second-priority channel at the same time.

Select **WATCH > TRI**.

TRI WATCH, your current channel, channel 16, and your second-priority channel appear on the screen. For example, TRI WATCH CH; and 75 + 16 + 9.

Selecting a Different Second-Priority Channel

You can select a channel other than channel 9 as your second-priority channel.

- 1 Select **MENU > CHANNEL > 2ND PRIORITY**.
- 2 Turn the **ENTER** dial to the preferred channel.
- 3 Select **OK**.

Switching to Priority Channels

You can quickly switch between your current working channel and a priority channel. When you change to a priority channel, the transmit power is set to high (25 W) automatically, and when you change back to your current channel, the transmit-power setting is restored.

On North American models, you can quickly switch between channel 16, your second-priority channel, and your original channel using the 16/9 key.

On International models, you can quickly switch between channel 16 and your original channel using the 16+ key.

- 1 To switch from your current channel to channel 16, select **16/9** or **16+**.
The transmit power changes to high (25 W) automatically. You can select **HI/LO > 1W** to change the transmit power to low (1 W).
- 2 On North American models, select **16/9** to switch to your second-priority channel.
- 3 Select **16/9** or **16+** to return to your previous channel and transmit-power setting.

Setting the Receiving Sensitivity

You can control the receiving sensitivity of the radio. When you have noise in high-traffic areas or areas with electromagnetic interference, such as near cell-phone towers, you can set the receiving sensitivity to LOC to decrease receiver sensitivity. In remote areas and on open water, you can set the receiving sensitivity to DIST to ensure that you use the maximum range of the receiver.

- 1 Select **HI/LO**.
- 2 Select an option:
 - Select **LOC** to enable local sensitivity.
 - Select **DIST** to enable distant sensitivity.

Switching Between 1 W and 25 W Transmitting Modes

You can control the transmitting power of the radio. Low (1 W) is used for local transmissions, and high (25 W) is used for distance and distress transmissions.

When two signals broadcast on the same frequency, a VHF radio receives only the stronger of the two signals. You should transmit calls other than distress calls using the lowest power setting that allows you to communicate, to reduce the possibility that your transmissions interfere with the transmissions of others.

In the USA channel band, transmissions on channels 13, 17, 67, and 77 must be low (1 W) by default.

In the Canadian channel band, transmissions on channels 13, 15, 17, 20, 1066, 67, 75, 76, and 77 must be low (1 W) by default.

In the International channel band, transmissions on channels 15, 17, 75, and 76 must be low (1 W).

NOTE: In the USA and Canadian channel bands, you can bypass the power setting for these channels temporarily during transmission (*Bypassing the Low Transmission Power Setting, page 8*). In the International channel band, the radio does not permit transmissions on these channels to be changed to high (25 W).

- 1 Select **HI/LO**.
- 2 Select **1W** or **25W**.
- 3 Select **OK**.

Bypassing the Low Transmission Power Setting

In the USA and Canadian frequency bands, transmissions on select channels are required to be low-power (1 W) by default, because they are intended for intership (bridge-to-bridge) communication (*Switching Between 1 W and 25 W Transmitting Modes, page 8*). If other radios cannot receive these channels due to the low power setting, you can bypass the default restriction during transmission.

NOTE: In the International channel band, the radio does not permit transmissions on these select channels to be changed to high (25 W).

- 1 From a USA or Canadian channel set to low power by default, such as 13, 17, or 77, hold **PTT**.
- 2 While transmitting, select **25W**.

Using the Hailer Function

Before you can use the hailer function, you must install a hailer horn (optional). For more information, see the *VHF 315 Series Installation Instructions*.

A hailer horn allows you to make on-boat or ship-to-shore announcements, and allows two-way communications between connected radios. You can address the ship using the radio or handset, and sounds received through the horn can be heard through the radio speaker. For vessels with enclosed cabins, the hailer horn allows you to hear sounds from the deck.

NOTE: When the radio is in hailer mode, it does not receive broadcasts from the active channel.

- 1 Select **PA > HAILER**.
Sounds received through the horn are heard through the radio speaker.
- 2 Hold **PTT**.
- 3 Select an option:
 - To make an announcement, speak into the handset.
 - To adjust the volume of the hailer broadcast, turn the **ENTER** dial.
- 4 Release **PTT** to stop broadcasting and listen for broadcasts from other connected radios on the ship.

Foghorn

NOTE: Foghorn functionality is not available on all VHF radio models.

Before you can use the foghorn, you must provide and install a hailer horn (optional) on the deck or tower of your boat. For more information, see the *Installation Instructions*.

The foghorn is part of the public address system of your radio. You can sound the foghorn through a hailer horn or an external speaker. Your radio can sound the horn automatically using standard patterns, or you can sound the horn manually. When you manually operate the foghorn, sounds received through the horn can be heard through the radio speaker between soundings.

Sounding the Foghorn Automatically

- 1 Select **PA > FOG > AUTO**.
- 2 Select a foghorn-type option.
The radio alternates between sounding the pattern of tones or rings and receiving radio broadcasts.
- 3 Turn the **ENTER** dial to adjust the volume of the horn (optional).

Sounding the Foghorn Manually

NOTE: When you sound the horn manually, the radio does not receive broadcasts between horn soundings.

- 1 Select **PA > FOG > MANUAL**.
Sounds are received through the horn and heard through the radio speaker.
- 2 Hold **PTT**.
NOTE: The horn stops sounding when you release PTT.
- 3 Turn the **ENTER** dial to adjust the volume of the horn (optional).


Adjusting the Sound Frequency of the Foghorn

You can increase or decrease the sound frequency of the foghorn. The pitch of the tone rises with an increase in frequency, and falls with a decrease in frequency. The minimum setting is 200 Hz, and the maximum setting is 850 Hz. The default setting is 350 Hz. Regulations dictate the correct frequency of foghorns, which correlate with the size of your vessel.

- 1 Select **MENU > SYSTEM > FOG FREQUENCY**.
- 2 Turn the **ENTER** dial to adjust the frequency in 50 Hz increments.
- 3 Select **ACCEPT**.

Entering Text

You may need to enter a name, a number, or other text on the radio.

- 1 From a number or text field, turn the **ENTER** dial to change the number, letter, or character.
- 2 Press the **ENTER** dial to accept the number, letter, or character and move to the next space in the sequence.
- 3 Repeat this process for each number, letter, or character.
NOTE: You can select  to return to the previous entry in the sequence.
- 4 Select **ACCEPT**.

NOAA® Weather Broadcasts and Alerts

NOTE: This feature is not available on all radio models.

NOAA weather broadcasts on the weather (WX) channels are available only in the USA and certain regions in Canada.


Compatible radio models are programmed with 10 WX channels to monitor weather broadcasts from the National Oceanic and Atmospheric Organization (NOAA). WX channels are listen-only channels that broadcast in a continuous loop and are updated regularly. NOAA broadcasting information is regional and relevant to your broadcast area.

Tuning Weather Broadcasts

- 1 From the home screen, press the **ENTER** dial.
WX appears on the screen.
- 2 Turn the **ENTER** dial to change the weather channel.

Enabling and Disabling Weather Alerts

You can enable weather (WX) alerts to sound when you are using standard radio channels.

- 1 When tuning weather broadcasts, select **ALERT** to enable or disable weather alerts.
 indicates that weather alerts are enabled.
- 2 Select **EXIT**.
The radio returns to normal operation while continuing to monitor weather alerts.

Digital Selective Calling


Digital Selective Calling

NOTE: Before you can use DSC capabilities, you must enter a Mobile Marine Safety Identity (MMSI) number ([Entering Your MMSI Number, page 11](#)). An MMSI number identifies each DSC radio, like a telephone number.

Digital Selective Calling (DSC) is a key component of the Global Maritime Distress and Safety System (GMDSS). DSC enables VHF radios to place and receive digital calls directly with other vessels and shore stations, including the USA and Canadian Coast Guards. Your radio includes full Class-D DSC capabilities.

If you have a GPS device connected to the transceiver, your latitude, longitude, and the current time are transmitted when you send a distress call or other type of DSC call. If you enter your position information manually, your latitude, longitude, and time of entry are transmitted with the call. Transmitting your location automatically speeds help in an emergency situation.

Channel 70 is reserved exclusively for DSC calls, and your device uses a dedicated receiver to maintain a constant watch on Channel 70. You do not need to change the channel to make a DSC call. Your device changes to Channel 70 automatically to transmit a DSC call. Your radio sends the DSC data over Channel 70 in less than one second, and then tunes to an appropriate channel for voice communications.

 appears on the device screen when you have an incoming or missed DSC call.

NOTE: The device disables DSC automatically when you turn on ATIS ([Automatic Transmitter Identification System, page 20](#)).

Entering Your MMSI Number

NOTICE

You can enter your MMSI number only once. If you must change your MMSI number after entering it, you must take your radio to your Garmin® dealer for reprogramming.

The Mobile Marine Safety Identity (MMSI) number is a nine-digit code that acts as a DSC self-identification number, and it is required to use the DSC capabilities of your radio. You can obtain an MMSI number from the telecommunications authority or ship registry for your country. In the USA, you can obtain an MMSI number from these sources:

- Federal Communications Commission (FCC): assignments are recognized internationally
- BoatU.S.®, Sea Tow®, or United States Power Squadrons®: assignments are for USA waters only.

1 Select **MENU > DSC > MY MMSI**.

2 Enter your MMSI number (*Entering Text, page 9*).

3 Select **ACCEPT**.

The radio prompts you to confirm your identity.

4 Enter your MMSI number again, and select **ACCEPT**.

If the MMSI numbers you entered do not match, a message appears.

5 If necessary, select **RETRY**, and enter the number again.

Viewing Your MMSI Number

Select **MENU > DSC > MY MMSI**.

Distress Calls

When you make a distress call, your call is transmitted to all DSC-capable radios within receiving range. Your current GPS position (latitude and longitude) and the current time are included in the transmission if you have a GPS device connected to your transceiver. If you manually entered your position information with the time, that data is transmitted with the call.

NOTE: You should familiarize yourself with the standard distress-call format and protocol to ensure your calls are clear and effective.

Sending an Undesignated Distress Call

When you send an undesignated distress call, the nature of your emergency is not transmitted to the receiving stations. Sending an undesignated distress call is a faster procedure that can save you time during an emergency.

1 Lift the spring-loaded door, and hold **DISTRESS** for at least 3 seconds.

The radio beeps and counts down the seconds. **DISTRESS CALL COUNTING DOWN** appears on the screen.

The radio sounds an alarm, switches to channel 70, and transmits your call on high (25 W) power.

2 Press any key to silence the alarm sound.

The radio tunes to channel 16 on high (25 W) power.

3 Hold **PTT** on the handset or radio to relay your distress message.

The radio waits for an acknowledgment (ACK) on channel 70 from a listening station.

Sending a Designated Distress Call


When you send a designated distress call, the nature of your emergency is transmitted to the receiving stations.

- 1 Lift the spring-loaded door, and press **DISTRESS**.
- 2 Turn the **ENTER** dial, and select the type of distress call.
TIP: You can select CLEAR to exit the screen without sending a distress call.
- 3 Hold **DISTRESS** for at least three seconds.
The radio beeps and counts down the seconds. DISTRESS CALL COUNTING DOWN appears on the screen.
The radio sounds an alarm, switches to channel 70, and transmits your call on high (25 W) power.
- 4 Press any key to silence the alarm sound.
The radio tunes to channel 16 on high (25 W) power.
- 5 Hold **PTT** on the handset or radio to relay your message.
The radio waits for an acknowledgment (ACK) on channel 70 from a listening station.

Waiting For and Receiving and Acknowledgment for a Distress Call

If the radio does not receive an acknowledgment for a distress call, the radio retransmits the distress call randomly between 3.5 to 4.5 minutes later, and continues to retransmit the distress call at random intervals until the radio receives an acknowledgment.

When the radio receives the acknowledgment, it begins beeping and DISTRESS ACK appears on the screen.

- 1 Press any key to turn off the beeping.
- 2 Select  to view additional information.
TIP: If the MMSI of the station transmitting the acknowledgment signal is an entry in your directory, the name associated with the MMSI number appears on the screen. If the MMSI of the station is not in your directory, the MMSI number appears on the screen.
- 3 Select **ACCEPT**.

Pausing and Resuming Distress Call Retransmission

If the radio does not receive an acknowledgment for a distress call, the radio retransmits the distress call randomly between 3.5 to 4.5 minutes later, and continues to retransmit the distress call at random intervals until the radio receives an acknowledgment. You can pause and resume the retransmission countdown.

- 1 Send a designated or undesignated distress call.
- 2 Select **PAUSE**.
The distress-call-retransmission countdown stops.
- 3 Select an option:
 - To resume the countdown, select **RESUME**.
 - To revoke the distress call, select **CANCEL** ([Revoking a Distress Call, page 13](#)).

Stopping Automatic Retransmission of Distress Calls

Select **CANCEL**.

The radio remains tuned to channel 16.

NOTE: Selecting CANCEL ends the automatic repetition of the call, but does not communicate to other stations that you no longer have an emergency. If you no longer have an emergency, you should revoke the distress call ([Revoking a Distress Call, page 13](#)).

Revoking a Distress Call

You do not transmit a distress call until you hold DISTRESS for at least three seconds. If you inadvertently make a distress call, or are no longer in distress, you should cancel the call immediately by transmitting a voice message to all stations on channel 16.

- 1 Select **CANCEL > YES**, and wait until **DISTRESS CANCEL HAS BEEN SENT** appears on the screen.
- 2 Select **OK**.
- 3 Hold **PTT** on the handset, and transmit an appropriate voice message to cancel the distress call (*Distress Call Cancellation Script, page 13*).
- 4 Select an option:
 - Select **END** to complete the distress-call cancellation and return to normal radio operation.
 - Select **RESEND** to resend the distress-call cancellation and start the process again.

Distress Call Cancellation Script

When you revoke a DSC distress call (*Revoking a Distress Call, page 13*), you should transmit an appropriate cancellation message.

For example, "All stations, all stations, all stations, this is ____ (vessel name), MMSI number ____, position ____ (North or South), ____ (West or East). Cancel my distress alert of ____ (date and time). This is ____ (vessel name), MMSI number ____. Out."

Placing Calls

Placing Individual Calls

- 1 Select **DSC > INDIVIDUAL**.
- 2 Select an option:
 - To enter the MMSI number manually, select **MANUAL**, enter the MMSI number, and select **ACCEPT**.
 - To select an entry from the directory, select **DIRECTORY**, and select an entry.
 - To select a recent call, select **RECENT CALLS**.
- 3 Select a channel (*Individual Call or Group Call Channels, page 14*).
The radio transmits the request with your call.
- 4 Select **CALL**.
The radio transmits the call on channel 70, and returns to the previous channel while listening for an acknowledgment on channel 70. After an acknowledgment is received, the radio changes to the channel you selected for the call.

Placing Group Calls

Before you can place a call to a group, you must enter the MMSI number of the group into the directory (*Adding a Group, page 18*).

You can contact a group of specific vessels, such as a sailing club or flotilla, by making a group call.

- 1 Select **DSC > GROUP > CALL**.
- 2 Select a saved group.
- 3 Select a channel (*Individual Call or Group Call Channels, page 14*).
The radio transmits the channel request with your call.
- 4 Select **CALL**.
The radio transmits the call on channel 70, then changes to the selected channel.

Placing All-Ships Calls

All-ships calls are transmitted to all stations within receiving distance of your radio. You can make two types of all-ships calls. Safety calls broadcast significant navigational or weather-related information. Urgency calls communicate situations about the safety of a vessel or person when danger is not imminent. The captain should discern whether a situation warrants a safety call or an urgency call.

- 1 Select **DSC > ALL SHIPS**.
- 2 Select **SAFETY** or **URGENCY**.
- 3 Select a channel (*Individual Call or Group Call Channels, page 14*).
The radio transmits the channel request with your call.
- 4 Select **CALL**.
The radio transmits the call on channel 70, then changes to the selected channel.

Individual Call or Group Call Channels

When placing an individual or group call, you should select from designated DSC channels. The radio transmits this request with your call.

- USA: channels 6, 8, 9, 10, 13, 17, 67, 68, 69, 71, 72, 73, and 77.
- Canada and International: all USA channels, plus channel 15

DSC channels are limited to channels that are available in all frequency bands. You can select **CUSTOM** to select a channel that is not listed. If you select a custom channel, the station you are calling may not be able to comply with the specified channel. You should select a channel that is appropriate for communication.

Requesting a Vessel's Position

Position data received from stations that respond to position request calls is sent over the NMEA® network. You can track the vessels on your Garmin chartplotter.

- 1 Select **DSC > POS. REQUEST**.
- 2 Select an option:
 - To enter the MMSI number manually, select **MANUAL**, enter the MMSI number, and select **ACCEPT**.
 - To select an entry from the directory, select **DIRECTORY**, and select an entry.
- 3 Select **CALL**.
The radio transmits the call on channel 70 and returns to the previous channel. **WAITING FOR ACKNOWLEDGE** appears on the screen.

Receiving Calls


Receiving Distress Calls and Distress Relay Calls

When receiving a distress call or a distress relay call, **DISTRESS** or **DISTR RELAY**, and information about the call, such as MMSI number and the nature of the distress, appear on the radio screen. A distress call is sent from a vessel in need of assistance, and a distress relay call is sent from either another vessel or a station on behalf of a vessel in need of assistance.

The radio sends data related to the call over the NMEA network based on how you configure MMSI filters (*Configuring DSC NMEA Transmissions, page 21*).

NOTE: When a distress call is received, the radio switches to channel 16 automatically after ten seconds.

When a distress call is received, select an option:


- To view additional information about the distress call and switch to channel 16, select .
- To accept the distress call and switch to channel 16, select **OK**.
- To review information about the distress call without switching to channel 16 automatically, select **PAUSE**.
- To ignore the distress call and stay on the current channel, press **CLEAR**.

Receiving All-Ships Urgency and Safety Calls

When you receive an all-ships urgency or safety call, ALL SHIPS appears on the screen, and URGENCY or SAFETY appears as the type of call. If the channel request is for an invalid channel, INVALID CH REQUEST appears on the screen.

NOTE: When an all-ships call is received, the radio switches to the requested channel automatically after ten seconds.

When an urgency or safety call is received, select an option:

- To view additional information about the call and switch to the requested channel, select .
- To accept the call and switch to the requested channel, select **OK**.
- To review information about the call without switching to the requested channel automatically, select **PAUSE**.
- To ignore the call and stay on the current channel, press **CLEAR**.

Receiving Individual Routine Calls

When you receive an individual routine call, INDIVIDUAL appears on the screen, and ROUTINE appears as the type of call. If the channel request is for an invalid channel, INVALID CH REQUEST appears on the screen.

NOTE: When an individual call is received, the radio switches to the requested channel automatically after ten seconds.

When a call is received on a valid channel, select an option:

- To accept the call and switch to the requested channel, select **OK**.
- To review information about the call without switching to the requested channel automatically, select **PAUSE**.
- To ignore the call and stay on the current channel, press **CLEAR**.

Receiving Position Requests

You can configure the radio to reply automatically to incoming position requests, or prompt you to review and approve the incoming requests before replying (*Sending Automatic Replies, page 19*).

When you receive a position request with automatic position replies enabled, SENDING ACKNOWLEDGE appears on the screen, and the radio sends your position automatically. After the position successfully transmits, POSITION SENT appears on the screen.

When you receive a position request with automatic position replies disabled, POS. REQUEST appears on the screen.

When you receive a position request with automatic position replies disabled, select **OK**, and select an option:

- To reply to the position request with your current position, select **OK**.
If GPS-position or manual-position data is available, the radio transmits your position to the other vessel.
- To ignore the position request, press **CLEAR**.

Receiving Position Calls

When you receive a position call, POS. SEND and the position data appear on the screen.

Select **OK**.

The radio saves the position report in the call log.

Receiving Group Calls

When you receive a group call, GROUP appears on the screen, and the radio prompts you to change to the requested channel. If the channel requested is invalid, INVALID CH REQUEST appears on the screen.

- 1 Select **OK**.
- 2 Turn the **ENTER** dial to select the requested channel.
- 3 Select **OK**.

Position Tracking

When you enable position tracking, the radio uses interval-based position requests to track up to three vessels. Your radio transmits received position data over the NMEA network, and you can track the vessels using your Garmin chartplotter (*Configuring DSC NMEA Transmissions, page 21*).

Selecting Vessels and Activating Position Tracking

Before you can use position tracking, you must have at least one vessel saved in the directory (*Directory, page 18*).

1 Select **DSC > POS. TRACKING > ADD ENTRY**.

2 Select the vessels you want to track.

You can track the position of up to three vessels at one time. If you select a fourth vessel, the radio sounds an error tone, and you must remove a vessel before you can add a new one.

3 Select **BEGIN TRACKING**.

 appears on the screen when the radio tracks vessels.

Position-Tracking Polling Interval Sequence

Regulations allow transmission of one position-request call every five minutes. When tracking more than one vessel, the radio alternates calling each vessel in the list at five-minute intervals. If a vessel does not respond to five consecutive position-request calls, the radio removes the vessel from the position-tracking list.

You can use this table to better understand how the time interval is applied to the vessels in the position-tracking list.

| Vessel | Time |
|--------|---|
| Ship 1 | 0 minutes (immediately when starting position tracking) |
| Ship 2 | 5 minutes |
| Ship 3 | 10 minutes |
| Ship 1 | 15 minutes |
| Ship 2 | 20 minutes |
| Ship 3 | 25 minutes |

Viewing and Deactivating Vessels on the Position Tracking List

You can deactivate vessels that you want to keep in the tracking list, but do not want to actively track.

1 Select **DSC > POS. TRACKING > VESSELS**.

2 Select a vessel.

3 Select **OFF**.

Deleting a Vessel From the Position Tracking List

You can delete vessels from the tracking list that you don't plan to track in the future.

1 Select **DSC > POS. TRACKING > DELETE**.

2 Select a vessel.




3 Select **YES**.

Call Log

When the radio receives a DSC call, it records the date and time, calling station, and type of call in the call log. The radio also records the latitude and longitude of the calling station if that data is transmitted with the call. DSC calls are logged as distress, position, or other calls.

| Call Type | Call Log |
|----------------------|----------|
| Distress | Distress |
| Distress relay | Distress |
| Distress acknowledge | Distress |
| Position send | Position |
| Position request | Position |
| Group | Other |
| All Ships | Other |
| Individual | Other |

When you enter a calling station in your directory, the name of the station appears in the list of calls. If the calling station is not saved in your directory, the MMSI number appears in the list of calls. A symbol indicates the station type.

| Symbol | Meaning | MMSI Number Format |
|---|-----------------|--------------------|
|  | Ship station | XXXXXXXXXX |
|  | Group call | 0XXXXXXXXX |
|  | Coastal station | 00XXXXXXXX |

Viewing the Calls in the Call Log

- 1 Select **DSC > CALL LOG**.
- 2 Select a call-log category.
- 3 Select a call.
Information about the call appears on the screen.

Placing a Call from a Call Log


Calls placed from the call log are placed as individual routine calls.

- 1 Select **DSC > CALL LOG**.
- 2 Select a call log type.
- 3 Select the MMSI number or the station name.
- 4 Select **CALL**.
- 5 Select a channel on which to transmit the call ([Channel Lists, page 23](#)).
The radio transmits the channel request with your call.
- 6 Select **CALL**.

Saving a Vessel or Station to the Directory from the Call Log

- 1 Select **DSC > CALL LOG**.
- 2 Select a call-log category.
- 3 Select the MMSI number you want to save.
- 4 Select **SAVE**.
- 5 Enter or edit the name for the saved vessel or station (optional) (*Entering Text, page 9*).

Deleting a Call Log Entry

- 1 Select **DSC**.
- 2 Select a call-log category.
- 3 Select the MMSI number or station.
- 4 Select .
- 5 Select **DELETE**.

Directory

You can store the MMSI numbers of vessels and stations, and assign names to them for quick access or for identification purposes.

Viewing Saved Vessels and Stations in the Directory

- 1 Select **DSC > DIRECTORY > DIRECTORY**.
- 2 Select a saved vessel or station.

Adding an Entry to the Directory

- 1 Select **DSC > DIRECTORY > ADD ENTRY**.
- 2 Enter the MMSI number (*Entering Text, page 9*).
- 3 Enter a name (optional).
- 4 Select **ACCEPT**.

Editing an Entry in the Directory

- 1 Select **DSC > DIRECTORY > EDIT ENTRY**.
- 2 Select an entry.
- 3 Edit the MMSI number, the name, or both (*Entering Text, page 9*).
- 4 Select **ACCEPT**.

Deleting an Entry from the Directory

- 1 Select **DSC > DIRECTORY > DELETE**.
- 2 Select an entry.
- 3 Select **YES**.

Adding a Group

A DSC group is a collection of specific vessels, such as a sailing club or flotilla, that share a single group MMSI number.

- 1 Select **DSC > GROUP > ADD ENTRY**.
- 2 Enter the group MMSI number (*Entering Text, page 9*).
- 3 Enter a name for the group (optional).
- 4 Select **ACCEPT**.

Editing a Group

- 1 Select **DSC > GROUP > EDIT ENTRY**.
- 2 Select a group.
- 3 Edit the group MMSI number, the name, or both (*Entering Text, page 9*).
- 4 Select **ACCEPT**.

Deleting a Group

- 1 Select **DSC > GROUP > DELETE**.
- 2 Select a group.
- 3 Select **YES**.

DSC Settings

Manual Position Information

If you do not have a GPS device connected to your radio, you can manually enter your position and time of entry. The position data is transmitted with DSC calls. When you enter the position and time manually, **MANUAL POS** appears on the screen.

Manually entered position information must be updated regularly, and the radio displays two alerts to remind you to update the position data.

- When the position data you entered manually is more than four hours old, **DATA IS OVER 4 HOURS OLD** appears on the screen. The radio continues to transmit this position data, but you should update it before it becomes invalid.
- When the position data you entered manually is more than 23.5 hours old, it is considered invalid and **DATA IS INVALID** appears on the screen. The radio does not transmit invalid position data, and you should update it immediately.

Entering Position Information Manually

- 1 Select **MENU > SYSTEM > MANUAL GPS**.
- 2 Enter your current coordinates and the present time (*Entering Text, page 9*).
- 3 Select **ACCEPT**.

Changing the Channel to 16 Automatically

By default, the radio changes to channel 16 automatically when receiving distress, distress relay, and all-ships urgency calls. In certain situations, when you must continually monitor a channel to maintain uninterrupted communication with another vessel, for example, you can disable this feature.

- 1 Select **MENU > DSC > AUTO CHANGE CH..**
- 2 Select an option:
 - To set the radio to switch automatically to channel 16 when you receive a qualifying call, select **ON**.
 - To set the radio to prompt you to accept or decline a channel change when you receive a qualifying call, select **OFF**.

Sending Automatic Replies

You can configure the radio to automatically respond to incoming calls, including position requests.

NOTE: When you configure the radio to automatically respond to incoming calls, the radio also changes the channel automatically for all incoming individual calls.

- 1 Select **MENU > DSC > INDIV REPLY**.
- 2 Select an option:
 - To send automatic replies, select **AUTO**.
 - To send replies manually, select **MANUAL**.

Automatic Transmitter Identification System

Automatic Transmitter Identification System (ATIS) is a vessel identification system used on certain inland waterways in some European countries. See your Garmin dealer to program your VHF radio if you plan to use your radio on waterways that are within the bounds of the Regional Arrangement Concerning the Radiotelephone Service on Inland Waterways (the Basel Agreement). ATIS is prohibited outside the European inland waterways that are covered by the Basel Agreement.

When you enable ATIS, your radio sends a data signal identifying your station at the end of every transmission. Data identifying your position is not sent, but your position is calculated through the method of triangulation by coastal stations that receive your transmissions.

To enable ATIS, you must enter your ATIS identification number (*Entering Your ATIS Identification Number, page 20*), and turn on ATIS (*Turning On and Off ATIS, page 20*). See your Garmin dealer to determine your ATIS identification number and to learn about ATIS requirements for your region.

Your radio disables these functions when you enable ATIS.

- Digital Selective Calling (DSC)
- Monitor two or three channels (Dual watch and Tri watch)
- Scanning channels

International channels 6, 8, 10, 11, 12, 13, 14, 71, 72, 74, and 77 restrict transmitting to low-power (1 W) when you enable ATIS.

Entering Your ATIS Identification Number

NOTICE

You can enter your ATIS identification number only once. If you must change your ATIS identification number after entering it, you must take your radio to your Garmin dealer for reprogramming.

NOTE: You can access the ATIS settings on the radio after the ATIS feature is activated by your Garmin dealer.

- 1 Select **MENU > ATIS > MY ATIS ID**.
- 2 Enter your ATIS number (*Entering Text, page 9*).
- 3 Select **ACCEPT**.
The radio prompts you to reenter your number.
- 4 Enter your ATIS number again, and select **ACCEPT**.
If the ATIS numbers do not match, a message appears.
- 5 If necessary, select **RETRY**, and enter the number again.

Turning On and Off ATIS


- 1 Select **MENU > ATIS > ATIS**.
- 2 Select **ON** or **OFF**.
ATIS appears on the screen when ATIS is enabled.
- 3 Select **OK**.

Viewing Your ATIS Identification Number

Select **MENU > ATIS > MY ATIS ID**.

NMEA 0183 and NMEA 2000*

When you connect the radio to a NMEA 0183 device or a NMEA 2000 network, you can transfer received DSC distress and position information to any compatible connected chartplotter ([NMEA, page 24](#)).

The radio can also receive GPS-position information from a NMEA 0183 device or a NMEA 2000 network. Received GPS-position information appears on the home screen and is transmitted with DSC calls.  appears on the screen when GPS data is available, and flashes when GPS data is not present. When GPS data is not present, you must enter your position manually ([Manual Position Information, page 19](#)).

For more information on connecting the radio to a NMEA 0183 device or a NMEA 2000 network, see the [Installation Instructions](#).

Additional Functionality with Other Garmin Devices

The radio has additional capabilities when you connect it to other Garmin devices, such as a chartplotter.

NOTE: You may need to upgrade your Garmin chartplotter software to use NMEA 0183 or NMEA 2000 features.

When you connect the radio to a Garmin chartplotter using either NMEA 0183 or NMEA 2000, your chartplotter keeps track of the current and previous positions of the contacts in the directory.

When you connect the radio to the same NMEA 2000 network as a Garmin chartplotter, you can use the chartplotter to set up an individual routine call.

When you connect the radio to the same NMEA 2000 network as a Garmin chartplotter, and you initiate a man-overboard distress call from the radio, the chartplotter prompts you to navigate to the man-overboard location. If you connect a Garmin autopilot system to the same NMEA 2000 network, the chartplotter prompts you to start a Williamson's turn to the man-overboard location.

Communicating Over NMEA 0183 or NMEA 2000

NOTE: This feature is not available on all models.

You can select a connection either to a NMEA 0183 device or to a NMEA 2000 network. The radio can communicate over only one communication protocol at a time.

- 1 Select **MENU > COMMUNICATIONS > PROTOCOL**.
- 2 Select **NMEA0183** or **NMEA2000**.

Configuring DSC NMEA Transmissions

You can filter the types of DSC-call data the radio sends to a connected NMEA 0183 device or over a NMEA 2000 network.

- 1 Select **MENU > COMMUNICATIONS > DSC OUTPUT**.
- 2 Select an option:
 - To send NMEA data when you receive a DSC call from any MMSI number, select **ALL VESSELS**, and proceed to the last step.
 - To disable sending NMEA data when you receive a DSC call, select **NO VESSELS**, and proceed to the last step.
 - To send NMEA data only when you receive a call from a vessel in your directory, select **SELECT VESSELS**, and proceed to the next step.

NOTE: When you configure the radio for **SELECT VESSELS**, all received DSC-distress-call data is sent over NMEA, even if the vessel is not in your directory.

- 3 Select a vessel in your directory.
- 4 Select an option:
 - To send all DSC-call data from this vessel, select **ON**.
 - To send DSC-distress-call data only from this vessel, select **OFF**.
- 5 Repeat this process for each vessel in your directory.
- 6 Select **BACK** to save your changes and exit the menu.

System Settings

Select **MENU > SYSTEM**.

DISPLAY: Sets the backlight and contrast levels.

BEEPER: Sets the volume or disables the beeper tone that sounds when you press a key or turn a dial.

AUTO POWER-ON: Sets the radio to turn on automatically when it receives power.

LANGUAGE: Sets the language for the radio.

Number Settings

You can customize the numbers shown on the home screen of the radio.

Select **MENU > SYSTEM > NUMBERS**.

LAT/LONG: Shows or hides the latitude and longitude numbers provided by the GPS position, or from manually-entered position data.

TIME: Shows or hides the time provided by the GPS acquisition, or from manually-entered information.

NOTE: The time updates automatically only if you acquire a GPS position. When you enter your time and position manually, the time shown does not update automatically. For manually entered position and time data, the time of entry is always shown on the home screen, even if you hide the time with this setting.

COG/SOG: Shows or hides course-over-ground (COG) and speed-over-ground (SOG) information.

NOTE: You must acquire a GPS position to show course-over-ground (COG) and speed-over-ground (SOG) information.

Units Settings

You can set the unit of measure used for values shown on the radio.

Select **MENU > SYSTEM > UNITS**.

SPEED: Sets the unit of measure shown for speed-related fields, such as speed-over-ground.

TIME > FORMAT: Sets the time format.

HEADING: Sets the radio to show all heading calculations, such as Course Over Ground (COG), using true or magnetic north.

NOTE: If the radio is configured for NMEA 2000 communication, the heading unit is set to AUTO, and shows heading data based on the information provided over the network. This setting cannot be changed.

Configuring the Time Offset

You can show the local time rather than Universal Coordinated Time (UTC). When you adjust for local time, LOC appears after the time on the home screen.

NOTE: When you make a DSC call, the time is sent in UTC format.

- 1 Select **MENU > SYSTEM > UNITS > TIME > OFFSET**.
- 2 Turn the **ENTER** dial to adjust the time offset from UTC.
- 3 Select **OK**.

Selecting the Frequency Band

You can switch between the USA, International, or Canadian frequency bands ([Channel Lists, page 23](#)).

NOTE: Not all frequency bands are available on all device models.

- 1 Select **MENU > CHANNEL > FREQUENCY BAND**.
- 2 Select a frequency band.

Changing a Channel Name

Channel names appear on the home screen using nine characters. If a channel name is longer than nine characters, the full name scrolls across the top of the screen, then switches to the short name. You can change the name of a channel to reflect a local meaning.

- 1 Select **MENU > CHANNEL > NAME**.
- 2 Turn the **ENTER** dial to select a channel, and select **OK**.
- 3 Change the name of the channel (*Entering Text, page 9*).
- 4 Select **ACCEPT**.

Restoring Factory Settings

You can restore the radio to the default factory settings. When you restore the radio to factory settings, all system changes and customizations are lost. Restoring factory settings deletes the call logs, but retains group entries, directory entries, the MMSI number, and the ATIS ID.

- 1 Select **MENU > SYSTEM > SYSTEM INFO > RESET**.
- 2 Select **YES** to confirm the reset.

Appendix

Alarms and Messages

BATTERY ALARM: Sounds when the battery reaches a specified low or high voltage. Check the battery wiring.

WX: Sounds when you set a weather alarm and the radio detects an incoming weather alert (*NOAA® Weather Broadcasts and Alerts, page 9*). The radio tunes automatically to the weather channel that is broadcasting the alert.

GPS ALARM: Sounds first when GPS data from a NMEA network or position data entered manually is more than four hours old. Sounds again when GPS data from a NMEA network or position data entered manually is more than 23.5 hours old (*Manual Position Information, page 19*).

POSITION TRACKING: Appears after five consecutive failed attempts to request position information from a vessel (*Position Tracking, page 16*).

Channel Lists

The International, USA, and Canadian channel lists are available online for reference. You are responsible for the correct use of channels according to local regulations.

- To view the latest international channel list, go to www.navcen.uscg.gov/?pageName=apps18.
- To view the latest USA channel list, go to www.navcen.uscg.gov/?pageName=mtVhf.
- To view the latest Canadian channel list, go to www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf01011.html#sched1.

Channel Prefixes

In January of 2017, new international regulations changed the numbering scheme for maritime VHF channels. Channels which were previously numbered with a suffix of A or B now have a prefix of 10 or 20.

- Channels formerly noted with an A now have a prefix of 10. These channels transmit and receive using only the ship station frequency and can be used for direct ship-to-ship communication.
- Channels formerly noted with a B now have a prefix of 20. These channels transmit and receive using only the shore station frequency.

VHF 315 Series Specifications

| | |
|-----------------------------|---|
| Dimensions (H x W x D) | 6 x 20.5 x 18.1 cm (2.36 x 8.07 x 7.13 in.) |
| Weight | 1.527 kg (3.37 lb.) |
| Operating temperature range | From -15° to 55°C (from 5° to 131°F) |
| Storage temperature range | From -20° to 70°C (from -4° to 158°F) |
| Compass-safe distance | 50 mm (2 in.) |
| Water rating | IEC 60529 IPX7 ¹ |
| Antenna connector | S0-239 (50 ohms) |
| Operating voltage | 12 Vdc |
| Wireless frequency | 156 to 162 MHz @ 44 dBm (25 W) maximum |
| Standby current draw | 350 mA |
| Receive current draw | 600 mA |
| Transmit current draw | From 2 A to 6 A (from 1 W to 25 W) |
| Maximum antenna gain | 9 dBi |
| Antenna port impedance | 50 ohms |
| Hailer output power | 20 W at 4 ohms |
| Hailer horn impedance | 4 ohms |
| NMEA 2000 LEN @ 9.0 Vdc | 1 (50 mA) |

NMEA

NMEA 0183 Information

Transmit

| Sentence | Description |
|----------|---|
| DSC | Digital selective calling (DSC) information |
| DSE | Expanded digital selective calling |

Receive

| Sentence | Description |
|----------|--|
| DTM | Datum reference |
| GGA | Global positioning system fix data |
| GLL | Geographic position (latitude and longitude) |
| GNS | GNSS fix data |
| RMA | Recommended minimum specific Loran-C data |
| RMC | Recommended minimum specific GNSS data |

¹ The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to www.garmin.com/waterrating.

NMEA 2000 PGN Information

Transmit

| PGN | Description |
|--------|-----------------------------|
| 059392 | ISO acknowledgment |
| 060928 | ISO address claim |
| 061184 | Single-frame proprietary |
| 126208 | NMEA request group function |
| 126464 | PGN's group function |
| 126720 | Fast-packet proprietary |
| 126993 | Heartbeat |
| 126996 | Product information |
| 126998 | Configuration information |
| 129799 | Radio frequency/mode/power |
| 129808 | DSC call information |

Receive

| PGN | Description |
|--------|--|
| 059392 | ISO acknowledgment |
| 059904 | ISO request |
| 060160 | ISO transport protocol, data transfer |
| 060416 | ISO transport protocol, connection management - RTS group function |
| 060928 | ISO address claim |
| 061184 | Single-frame proprietary |
| 065240 | ISO commanded address |
| 126208 | NMEA request group function |
| 126720 | Fast-packet proprietary |
| 129026 | COG and SOG, rapid update |
| 129029 | GNSS position data |
| 129044 | Datum |

Cleaning the Outer Casing

NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

- 1 Clean the outer casing of the device (not the screen) using a cloth dampened with a mild detergent solution.
- 2 Wipe the device dry.

